


The Eco Timer is a simple timing device designed to go behind the switch plate (supplied with the timer). The timer operates on a 12 hour schedule meaning it will be on at the same time morning and evening each day of the week. The programmed time can be selected for a period from 1 to 11 hours and three heat settings can be selected: 50%, 75% or 100%.

Installing the timer

Connect the Thermorail towel rail to the timer as per the below wiring diagram.

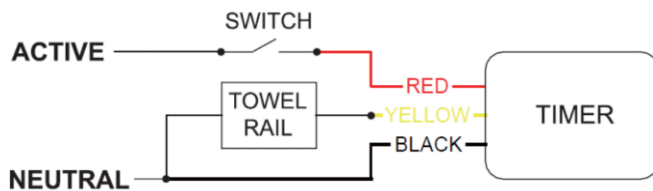

Programming the timer

The timer needs to be programmed at the time you want the heated towel rail to turn on i.e. if you want the rail to turn on at 6 o'clock you need to program it at either 6:00AM or 6:00PM.

Turn the switch on and listen to the beeps – each beep represents one hour. Turn the switch off after the number of hours you want it on for. i.e if you want it on for 4hrs switch it off after 4 beeps.

Turn the switch back on straight away and the timer will confirm with beeps the number of hours selected i.e. if you have selected 4hrs, it will beep 4 times after switching back on.

This is followed by a single, double and then a triple beep to set the heat setting.

1 beep = 50%

2 beeps = 75%

3 beeps = 100%

To select 50% turn off and then on again after the single beep. To select 75% turn the switch off and then on after the double beep. For full power do not touch the switch after the triple beep.

Technical data

Supply voltage	AC 220-240V 50Hz
Maximum Load	1A
IP Rating	IP30
Warranty	1 Year
Width	70mm
Height	120mm
Depth	10mm

Factory Reset

To reset the timer, turn the timer off for approximately 30seconds before turning it back on.

The next time you turn on the timer it will start off with 12 beeps.